

List of all possible lengths for following CodeLoxx and wAppLoxx versions:

CLX-LA-S/SP, CLX-LB-SP, CLX-LHZ-SP, CLX-LA-RP, CLX-LA-AFP, CLX-LA-EF/EFP, CLX-LCA-S/SP, CLX-LCA-AFP, CLX-LCA-EF/EFP  
 CLX-LProxA-S/SP, CLX-LProxB-SP, CLX-LProxHZ-SP, CLX-LProxA-RP, CLX-LProxA-AFP, CLX-LProxA-EF/EFP,  
 WLX-LMifA-AP, WLX-LMifA-IP as well as their panic and security options



Total length	Ext.	Int.	Axis
60	30	30	90
65	30	35	90
65	35	30	90
70	30	40	90
70	35	35	90
70	40	30	90
75	30	45	90
75	35	40	90
75	40	35	90
75	45	30	90
80	30	50	90
80	35	45	90
80	40	40	90
80	45	35	90
80	50	30	90
85	30	55	/
85	35	50	90
85	40	45	90
85	45	40	90
85	50	35	90
85	55	30	90
90	30	60	120
90	35	55	120
90	40	50	90
90	45	45	90
90	50	40	90
90	55	35	90
90	60	30	90
95	30	65	120
95	35	60	120
95	40	55	120

Total length	Ext.	Int.	Axis
95	50	45	120
95	55	40	120
95	60	35	120
95	65	30	120
100	30	70	120
100	35	65	120
100	40	60	120
100	45	55	120
100	50	50	120
100	55	45	120
100	60	40	120
100	65	35	120
100	70	30	120
105	30	75	120
105	35	70	120
105	40	65	120
105	45	60	120
105	50	55	120
105	55	50	120
105	60	45	120
105	65	40	120
105	70	35	120
105	75	30	120
110	30	80	120
110	35	75	120
110	40	70	120
110	45	65	120
110	50	60	120
110	55	55	120
110	60	50	120
110	65	45	120

Total length	Ext.	Int.	Axis
110	75	35	120
110	80	30	120
115	30	85	/
115	35	80	120
115	40	75	120
115	45	70	120
115	50	65	120
115	55	60	120
115	60	55	120
115	65	50	120
115	70	45	120
115	75	40	120
115	80	35	120
115	85	30	120
120	30	90	150
120	35	85	150
120	40	80	120
120	45	75	120
120	50	70	120
120	55	65	120
120	60	60	120
120	65	55	120
120	70	50	120
120	75	45	120
120	80	40	120
120	85	35	120
120	90	30	120
125	30	95	150
125	35	90	150
125	40	85	150
125	45	80	150

95	45	50	120
----	----	----	-----

impossible combinations of lengths.

Total length	Ext.	Int.	Axis
125	55	70	150
125	60	65	150
125	65	60	150
125	70	55	150
125	75	50	150
125	80	45	150
125	85	40	150
125	90	35	150
125	95	30	150
130	30	100	150
130	35	95	150
130	40	90	150
130	45	85	150
130	50	80	150
130	55	75	150
130	60	70	150
130	65	65	150
130	70	60	150
130	75	55	150
130	80	50	150
130	85	45	150
130	90	40	150
130	95	35	150
130	100	30	150
135	30	105	150
135	35	100	150
135	40	95	150
135	45	90	150
135	50	85	150
135	55	80	150
135	60	75	150
135	65	70	150

110	70	40	120
-----	----	----	-----

Total length	Ext.	Int.	Axis
135	70	65	150
135	75	60	150
135	80	55	150
135	85	50	150
135	90	45	150
135	95	40	150
135	100	35	150
135	105	30	150
140	30	110	150
140	35	105	150
140	40	100	150
140	45	95	150
140	50	90	150
140	55	85	150
140	60	80	150
140	65	75	150
140	70	70	150
140	75	65	150
140	80	60	150
140	85	55	150
140	90	50	150
140	95	45	150
140	100	40	150
140	105	35	150
140	110	30	150
145	30	115	/
145	35	110	150
145	40	105	150
145	45	100	150
145	50	95	150
145	55	90	150
145	60	85	150

125	50	75	150
-----	----	----	-----

Total length	Ext.	Int.	Axis
145	65	80	150
145	70	75	150
145	75	70	150
145	80	65	150
145	85	60	150
145	90	55	150
145	95	50	150
145	100	45	150
145	105	40	150
145	110	35	150
145	115	30	150
150	30	120	/
150	35	115	/
150	40	110	150
150	45	105	150
150	50	100	150
150	55	95	150
150	60	90	150
150	65	85	150
150	70	80	150
150	75	75	150
150	80	70	150
150	85	65	150
150	90	60	150
150	95	55	150
150	100	50	150
150	105	45	150
150	110	40	150
150	115	35	150
150	120	30	150

The sign „/“ in column „axis“ shows the