

C553 / C556 / C559 / C565 | Standard Cable Lockout User Manual




Security Tech Germany


Material Content:

a. Standard Cable Lockout


b. Braided steel cable
C553 = 1 m (3ft.)
C556 = 2 m (6ft.)
C559 = 3 m (10ft.)
C565 = 5 m (15ft.)

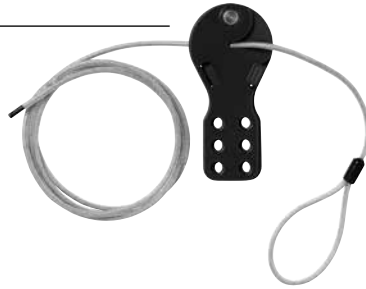


Application:

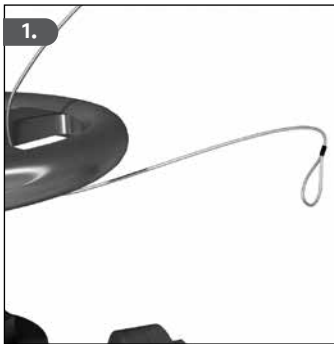


1. Pass the non-looped portion of the cable through or around all the components intended to be locked out.

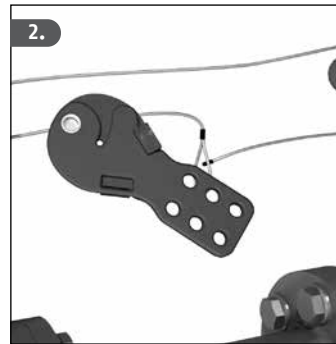

2. Thread the cable through the looped end of the lockout assembly. Tension the cable as tight as possible.

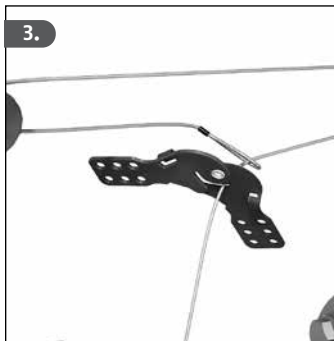

3. Open the lockout device by rotating the locking lever to the left. Place the device over the cable loop, holding the cable in its tightest position.

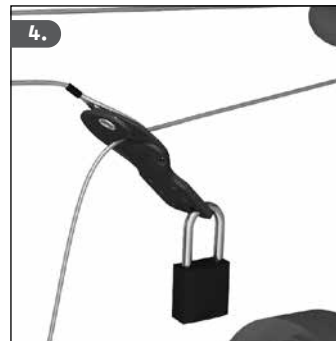

4. Squeeze the device closed and insert up to six padlocks.

Please make sure the cable is tight enough to effectively lock out the intended lockout points.



Do you already know our ABUS Safelex™ Universal Cable Lockout?

With its precision clamp mechanism, it provides the ultimate all-around safety lockout. The clamp mechanism allows the cable to be adjusted without having to remove it from the device.

WARNING:



Product should only be used by personnel properly trained in lockout procedures. Product should only be used on the appropriate application (s). Follow product instructions for proper application of each product. Properly trained personnel should check to ensure that product is secure and equipment will not operate. Failure to follow product instructions and warnings may result in serious bodily injury or death.

You will find additional notes and corresponding application videos to every lockout device following the link:
<http://www.abus.com/eng/Service/Videos/Industrial-safety>